


## POM | KEPITAL F30-03 | 标准牌号

- 普通注塑成型的低散发（低粘度）牌号
- 适用于多腔注塑件和薄壁件

基本信息	测试方法	单位	值
聚合物	ISO 1043	-	POM
物理性能	测试方法	单位	值
吸水率	ISO 62	%	0.2
密度	ISO 1183	g/cm <sup>3</sup>	1.41
溶剂质量流动速率	ISO 1133	g/10min	27
热性能	测试方法	单位	值
热变形温度(1.8 MPa)	ISO 75		101
燃烧性	UL 94	-	HB
线性膨胀系数	ISO 11359	X 10 <sup>-5</sup> /	12
熔融温度	ISO 11357		165
机械性能	测试方法	单位	值
拉伸模量	ISO 527	MPa	2,850
拉伸强度	ISO 527	MPa	65
屈服伸长率	ISO 527	%	8.0
断裂标称应变	ISO 527	%	25
弯曲强度	ISO 178	MPa	90
弯曲模量	ISO 178	MPa	2,700
简支梁冲击强度（缺口，23 °）	ISO 179/1eA	kJ/m <sup>2</sup>	5.5
简支梁冲击强度（缺口，-30 °）	ISO 179/1eA	kJ/m <sup>2</sup>	5.0
电气性能	测试方法	单位	值
表面电阻率	IEC 60093		1x10 <sup>16</sup>
体积电阻率	IEC 60093	· cm	1x10 <sup>14</sup>
介电强度	IEC 60243-1	kV/mm	19
Other	测试方法	单位	值
成型收缩率(流动方向, t = 2 mm)	ISO 294-4	%	2.0

Revision No : 3 (2020-06-24)

## 注塑条件

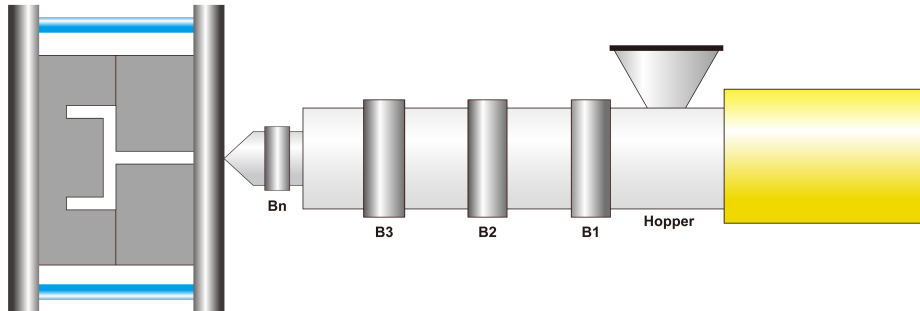

### 预干燥 (建议最大吸水率为 : 0.1 %)

推荐干燥条件 80 °C ~ 90 °C (176 ~ 194 ) for 3 h ~ 4 h

### 温度

模具温度 : 60 ~ 80 (140 ~ 176 )

料筒温度 : 170 ~ 210 (338 ~ 410 )

Mold	Bn(Nozzle)	B3(Metering)	B2(Compression)	B1(Feeding)	Hopper
60 ~ 80	180 ~ 210	190 ~ 200	180 ~ 190	170 ~ 180	60 ~ 80
140 ~ 176	356 ~ 410	374 ~ 392	356 ~ 374	338 ~ 356	140 ~ 176

### 塑化

螺杆转速 : 150 mm/s ~ 200 mm/s

背压 : Maximum 20 bar

### 联系信息

#### 总部

首尔特别市中区小公路94 OCI大厦14楼  
02-728-7481

#### GPAC Shanghai

SOHO Tianshan Plaza. No.1717 Tianshan Rd.  
Changning District. Shanghai, China  
+86-21-6237-1977

#### 研究所

Wavetech B/D, 7F, 15, Ilijik-ro 94gil, Anyang city,  
Republic of Korea (13901)  
82-31- 436 -1300

#### 平泽工厂

京畿道平泽市彭城邑秋八产业园1街82号  
82-31-691-3003

### 放弃

Notice to users : The information contained in this data sheet is based on our current knowledge and experience, so it may change as new knowledge and experience becomes available. This information is based on only above-mentioned product produced in Korea Polyacetal Co., Ltd. ("KPAC") through relevant test methods and conditions and doesn't relate to any products made of this product with the inclusion of other additives, such as processing aids or colorants. This information should not be construed as a promise or guarantee of specific properties of this product described or its suitability for a particular application, so users make their own determination as to its suitability to their purposes prior to use this product. It is the sole responsibility of the users to investigate whether any existing patents are infringed by the use of this product. This product is not intended for use in medical and dental implants and users should meet all safety and health standards. KPAC makes no warranty and assumes no liability in connection with any use of this information.